
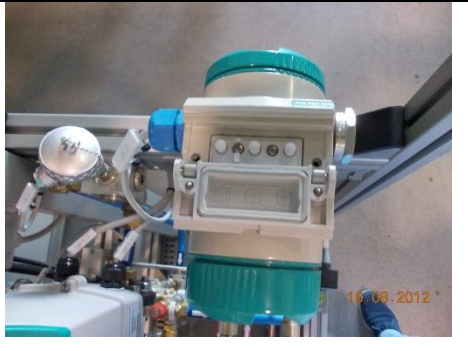


SIEMENS SITRANS P DSIII: zero offset procedure

0	Remove every plug and every pipe connected to the instrument. The instrument must have all the 4 holes (2 on the front and 2 in the back) exposed to open air	
1	Open the top cover using a screwdriver	
2	You will find three buttons: M , ↑ , ↓	

Revision: 1
Data: 10/08/12

Working Instruction

Author:
Francesco Annechini

3 To calibrate the zero point push **M** button until the indicator on the bottom-left of the display will show **number 7**



4 Press both pushbuttons **↑** and **↓** simultaneously



- 5 Push **M** button until the display returns to the usual visualization, then close the cover and re-screw it.

